


Requirements for RightMesh Emergency app.

Homepage

Homepage structured as described.

At the bottom of the screen provide a bar with three options



- **Messages** - where a list of conversation that I had with my contacts. The column should mention whether my contact is in range or not which means whether he/she is a part of the mesh. If the contact is nearby display the distance from the user.
- **Nearby users:** Display users on the local mesh - within the contacts and new users
- **Contacts:** Gives a list of contacts who have this emergency app.
- At the top right display user's profile picture which the user can click which will give a settings/profile page.

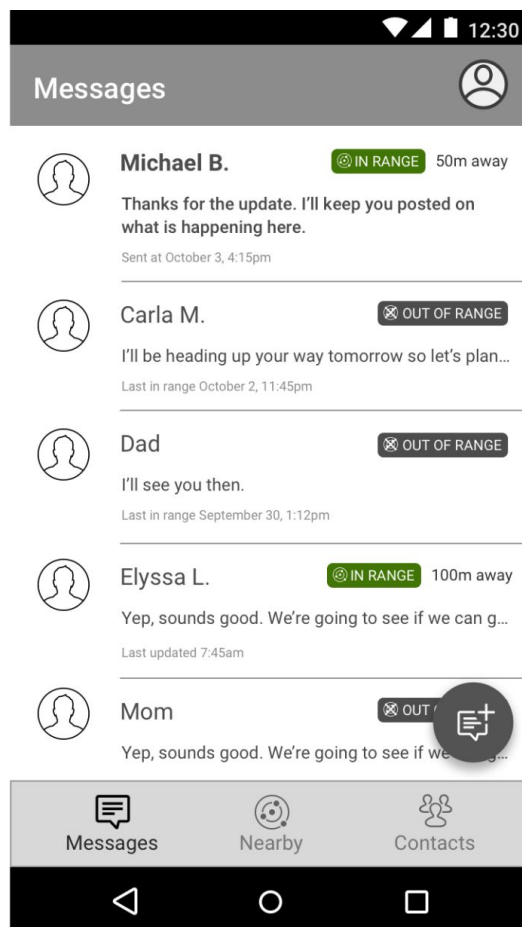

Profile/ settings page

On the profile/settings page where a user clicks his/her user profile picture on the upper right corner of the home to access the profile/setting page. The user should be provided with these following options on the profile/settings page

- Set your status
- Location Sharing OFF/ON -OFF if the location sharing is turned off ON if Location sharing is turned on
- Invite people to join
- RightMesh settings - to access RightMesh settings
- Settings - App settings page yet be designed
- About - Details about the App, like current version etc

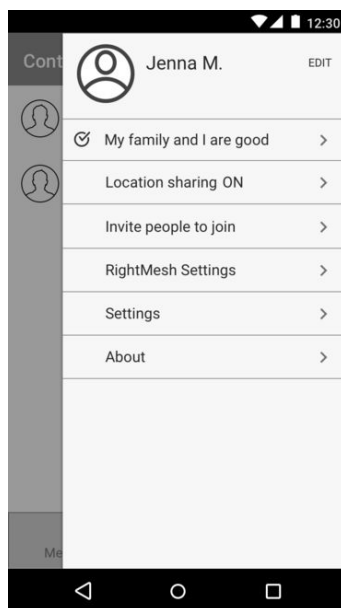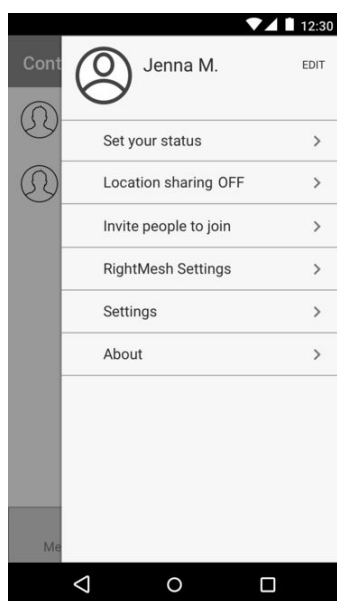

EDIT


In this option user can set change the profile picture and username.

Set your status

On this page please provide an a list of predefined status from which the users can select their status. Also all of these predefined status have a predefined symbol, which will be



displayed before the the status. **Selecting the status can be done using a radio button for the predefined status, display the radio button on the right side.** The predefined list are

- I'm safe
 - I need help
 - I need urgent help
 - I am First Aid Certified
 - I can help others
-
- In addition to the predefined list of status, please provide a textbox where a user can type or customize his/her status.
 - After selecting the status the user should click on save button which will on the top right corner, in order to successfully save the his/her status.

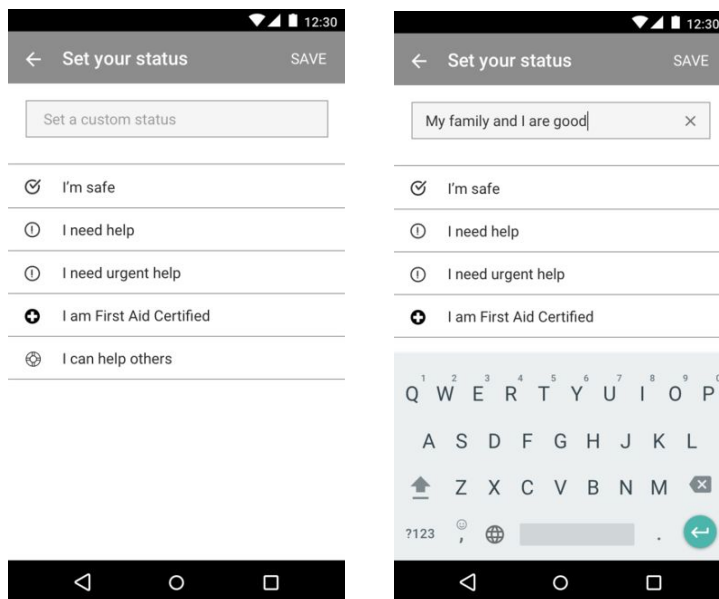


Location sharing OFF/ON

- Give the user a option to whether they want to share to share their location or not. Please display what the user has selected (OFF/ON) on the profile/setting page under the Location sharing option.
- Followed by the option show user's location of the map the map has to be offline. Followed by the address and Gps co-ordinates

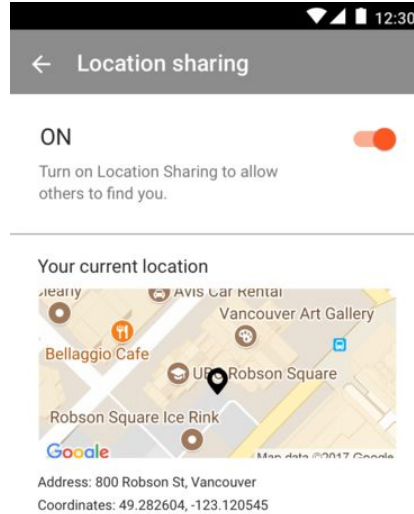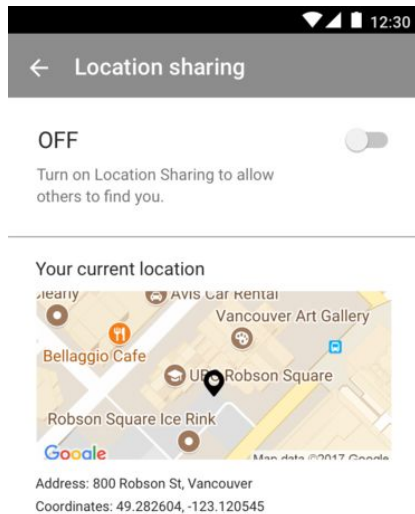

Invite people to join.

Here users can invite other users from their contacts using SMS. Users should also be able to search their contacts they want to invite through the search bar on top.

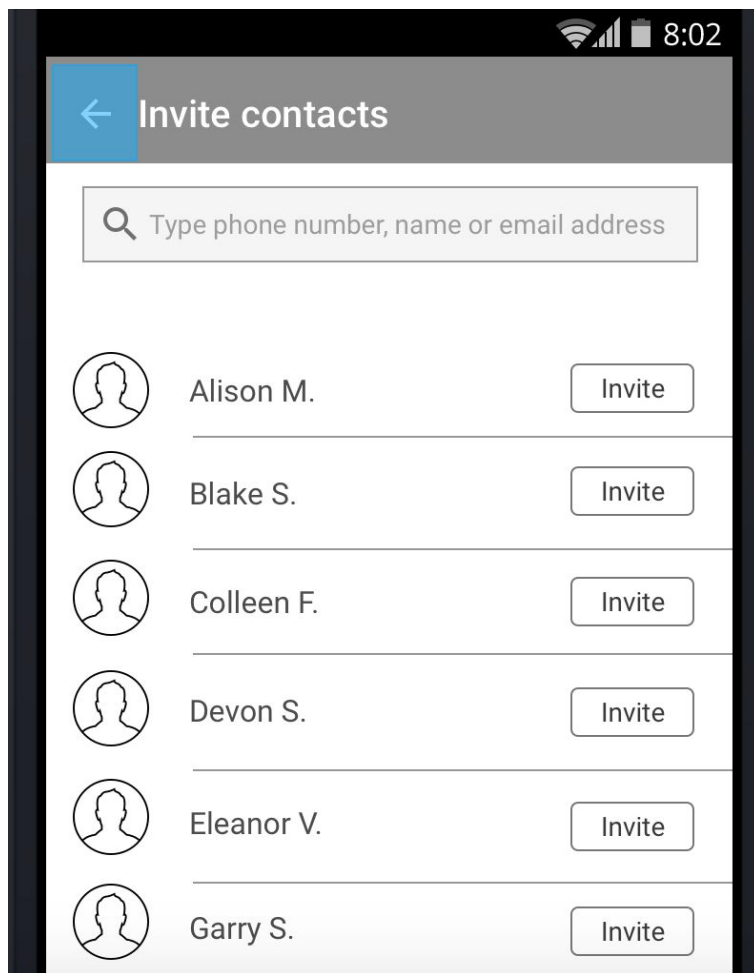

RightMesh setting

Here user can access the RightMesh setting page

Settings

Should this page have a settings to the app - will forward you the designs and requirements once ready.




About


In this option, display information about the app like terms and condition and version. As the branding is still in progress the designs will be provided once when ready.

Message Tab

The Message Tab option is on the home page. where a list of conversation that Users had with their contacts. The column should should mention whether my contact is in range or not which means whether he/she is a part of the mesh. If the contact is nearby display the distance- from the user.

- The user can go into a conversation by clicking it. Here the user can directly have a conversation with his/her contact.
- The users can send recorded audio, text and images to his/her contact.
- On the top bar the user is displayed with status of the other user, last update of the location, distance from the user, In range or not (part of the mesh or not)
- Upper right there is 3 vertical point style menu/setting option where user can access to the following options
 - Location & profile
 - Block
 - Delete Chat
- Incase its a new user i.e not stored in the contacts the page layout will be the same but the above options will be displayed before the conversation
 - Add to contacts
 - Location & profile
 - Block
 - Delete Chat
- User can create a new conversation using the FAB
- When the user click on the FAB they either have an conversation directly or have a group chat using the group chat option.

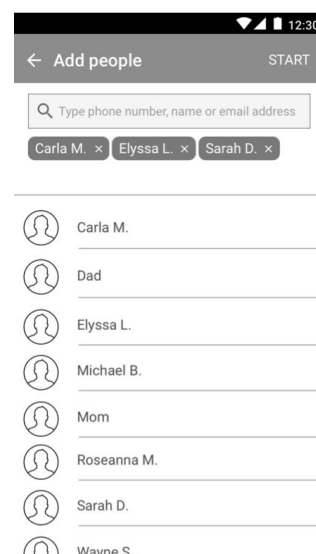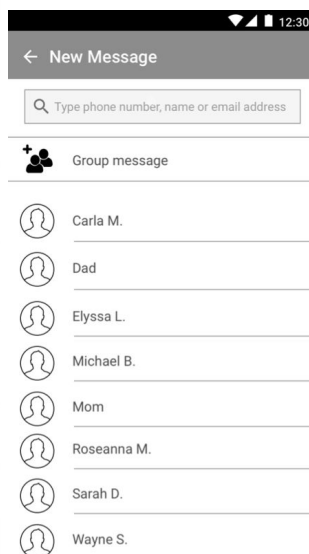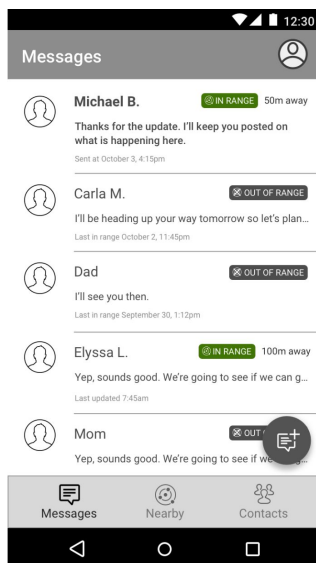


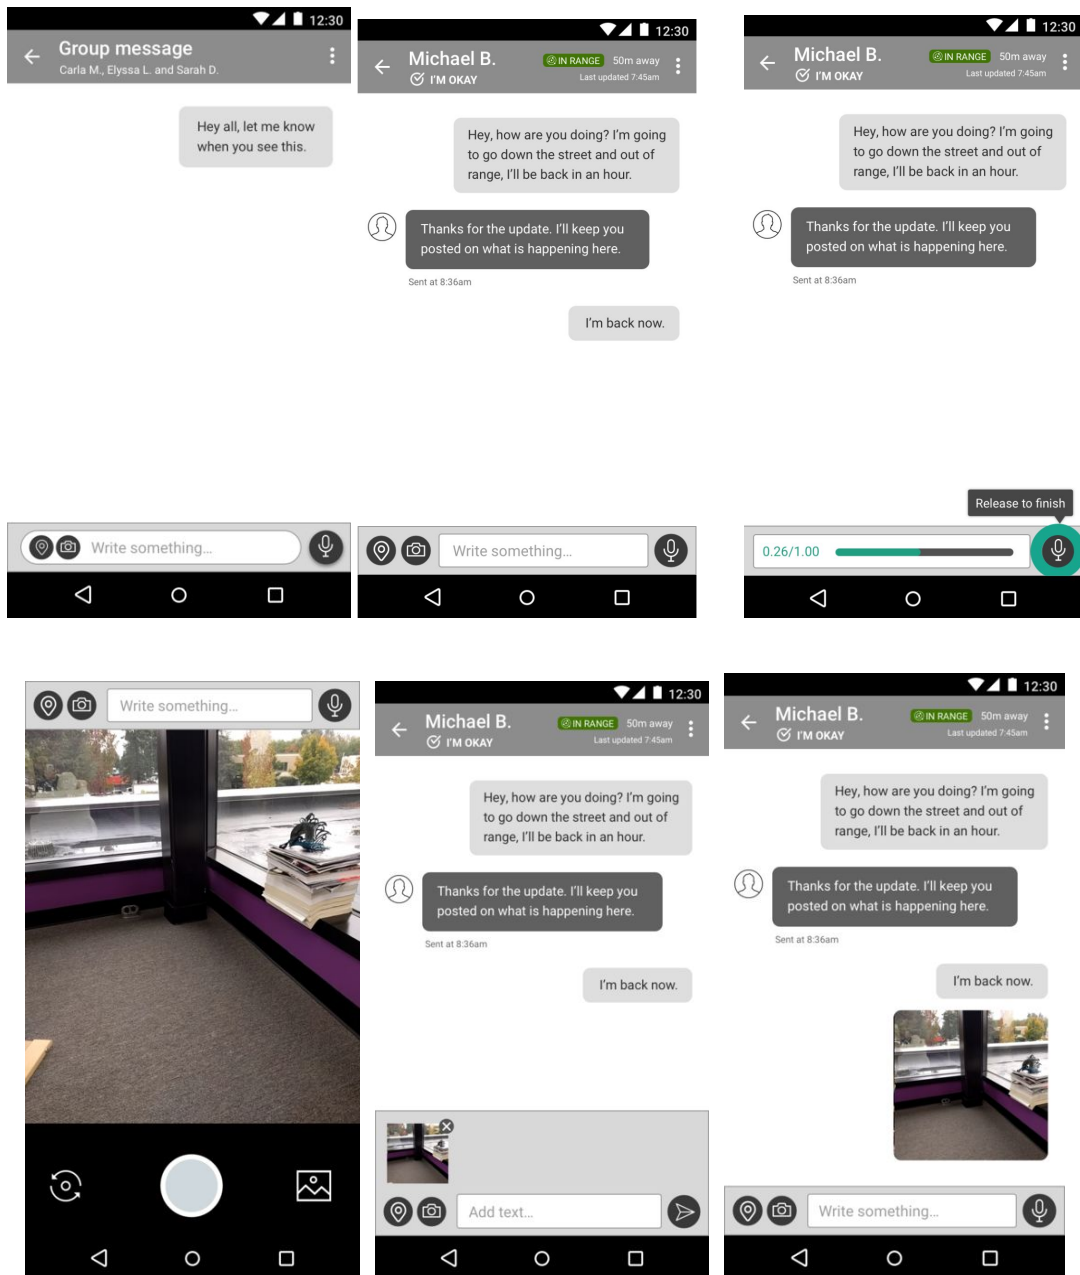

Nearby

- In this option the user can view all the users on the Mesh. The users can view other nearby user's status, location and last updated location, in range or not (part of the mesh or not).
- **Incase the user just went out of the range (not in the mesh anymore) display him/her on the nearby section for a while(5mins ???)**
- The user can select any of the nearby users by clicking them and have a conversation with them. But if the nearby user is not a contact the the user will be get

the following option to add to contacts, block and view location, while also providing the option messaging the new nearby user

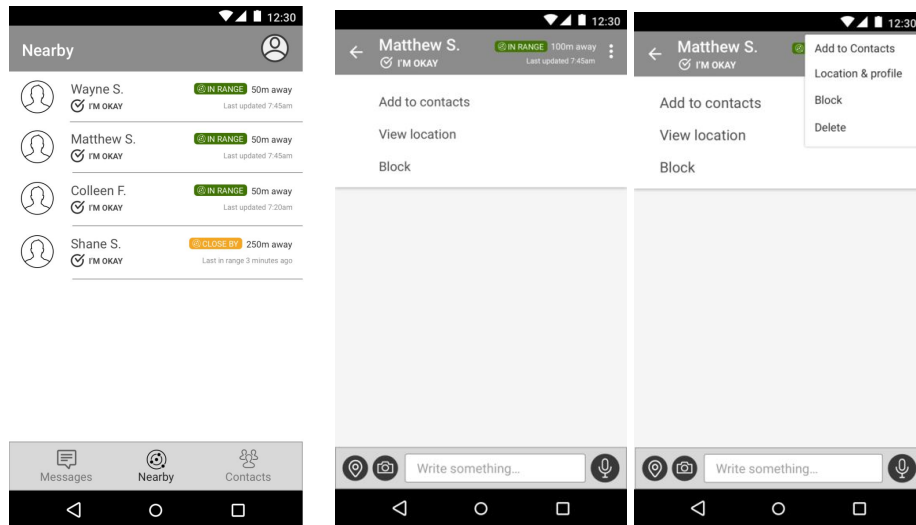

Contacts tab

- Display all the contacts (using the emergency) and user can invite new users by clicking the (+) on the bottom right

